PROJECTX®

USER GUIDE

DEVICE ANATOMY

Get to know each part of the device before you get started.

1 **Mouthpiece**
Pop out the mouthpiece to turn on ProjectX®.

2 **Indicator**
The colour changes based on the temperature and status of device.

3 **Oven Lid**
Press on either side of the lid to tilt and remove.

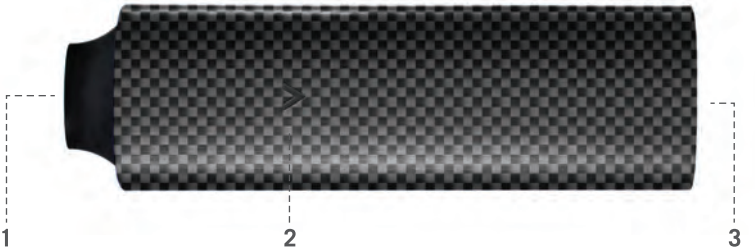
1
2
3

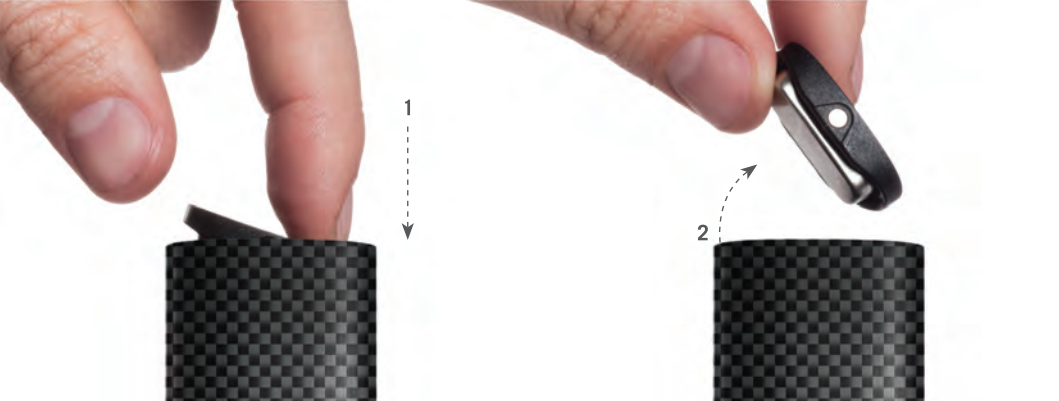
1
2

Step One

REMOVE LID

Press on either side of the lid to tilt and remove.

Fill Line

Step Two

FILL OVEN

Loosely fill the oven with your preferred tobacco blend. All material should be inside the stainless steel oven. **While ProjectX® is cool**, use the lid to tamp down and firmly pack your blend.

Step Three

POWER ON

Press the mouthpiece to turn on ProjectX®.

ENJOY PROJECTX®

While heating, the light will shine purple. When ready, it shines green. ProjectX® is smart. If left on and not in use, ProjectX® will go into low power mode and shine blue until you pick ProjectX® up again.

POWER OFF

Press the mouthpiece GENTLY inward until the FIRST CLICK.

TEMPERATURE OPTIONS

While ProjectX® is on, use the thumbnail groove to remove the mouthpiece. ProjectX® will turn off and indicate the current temperature setting.

Press the glowing white button inside to cycle through temperature options, then replace the mouthpiece.

- Low Heat Mode
- Medium Heat Mode (default)
- High Heat Mode

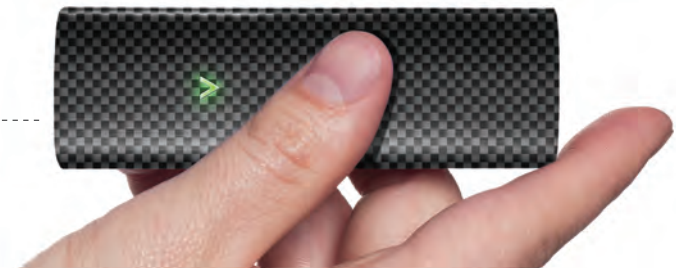

BATTERY LEVEL

While on, shake ProjectX® to show remaining battery. If battery level is low, place it on the charging stand.

- **Full Battery**
  ProjectX® flashes green.
- **Partially Charged**
  ProjectX® flashes yellow.
- **Low Battery**
  ProjectX® flashes red.

CHARGING

If battery level is low, place it upside down on the charging stand.

- **Full Battery**
  ProjectX® shines green.
- **Charging**
  ProjectX® shines orange.

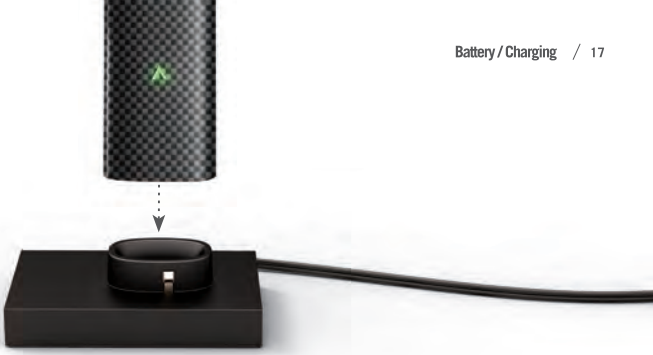

CLEAN

ProjectX® is a precision device. It's important to clean ProjectX® on a regular basis. If your ProjectX® isn't operating at its best, cleaning it thoroughly will likely do the trick. If you see liquid of any kind collecting in your device, clean it!

Mouthpiece

While on, gently pull the mouthpiece to remove it. It can be cleaned with soap and water. Allow it to dry completely before replacing.

Device Body

After removing the mouthpiece and lid, moisten a pipe cleaner with an alcohol wipe.

Starting from the mouthpiece end, insert the moistened pipe cleaner through the stainless steel vapor tube until it pushes out the oven screen. Floss until shiny and new.

Use a wipe, moistened bent pipe cleaner or moistened swab to clean the oven area and screen. Replace screen before enjoying ProjectX®.

SAFETY

Warning

Failure to follow these safety instructions could result in injury or damage. Users of this product do so at their own risk. ProjectX® nor its retailers assume any responsibility or liability associated with the use of this product. ProjectX® is for adult use and consumption only.

Handling

1. Do not drop, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into a ProjectX® vaporizer.
2. Do not clean ProjectX® other than as instructed.

3 Do not attempt to repair/modify a ProjectX® yourself.

4 Do not use a damaged ProjectX® Charger or non-official charger. Use caution when handling ProjectX®, as the heater area is hot when the device is turned on.

Choking Hazards

ProjectX® contains small parts which may be a choking hazard to small children. Keep ProjectX® away from children.

WARRANTY

2 Year Ltd Warranty Information

ProjectX® warrants this device against defects in materials and workmanship under normal use for a period of two (2) years from the date of retail purchase by the original end-user purchaser.
If a physical defect arises and a claim is received within the Warranty Period, at its option and to the extent permitted by law, ProjectX® will either:

1. repair the product defect,
2. exchange the product with a product that is new or is at least a functionally equivalent product, or

The Limited Warranty does not apply to normal performance degradation of batteries or neglecting to adhere to cleaning instructions.
Compliant with EU regulations.

Exclusions and Limitations

The Limited Warranty applies only to products manufactured by ProjectX®. that can be identified by the ProjectX® trademark, trade name, or logo affixed to them. The Limited Warranty does not apply to any non-ProjectX® products. This warranty does not apply to (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, acts of piracy, or other external causes; (b) to damage caused by operating the product outside the permitted or intended use as described by ProjectX®; (c) to a product or part that has been modified to alter functionality or capability without the written permission of ProjectX®; (d) to cosmetic damage, including but not limited to scratches, dents, and broken plastic.

ENVIRONMENT

Informal handling of waste electrical and electronic equipment (WEEE) has potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.

The crossed out waste bin symbol indicates that this product is electrical and/or electronic equipment waste (WEEE) and should not be treated as household waste. Instead this product should be separated and disposed of through the established municipal collection point

for recycling of electrical and electronic equipment. You will help prevent potential negative consequences for the environment and human health by disposing of this product appropriately.

Moreover, the recycling of materials will protect the environment and conserve natural resources.

For more information about environmentally safe recycling of this product, please contact your local household waste disposal service.

Patented European Design.
Assembled in PRC.

ProjectX® Vaporizer

©2013 ProjectX®. All rights reserved.

ProjectX® (name, logo and tag lines)
are trademarks.

Support

For help with your ProjectX®
please visit www.vaporizer-x.com.

CE RoHS

PROJECTX®

THE VAPORIZER YOU'VE ONLY DREAMED ABOUT